


COSMO BRANDS INC.
CASSINI
Binoculars Instructions

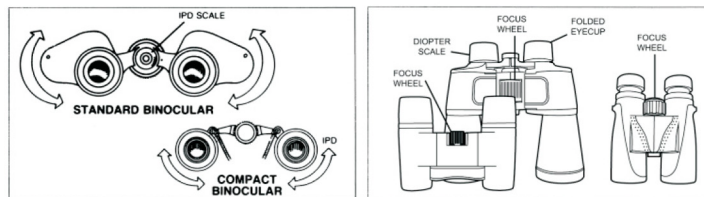

I. HOW TO USE YOUR BINOCULAR:

A. IPD ADJUSTMENT

Set the interpupillary distance by grasping the body and bending it until you can see one circle of view. The setting for your eyes will be indicated on the IPD Scale. (Note the scale setting for later use.)

B. FOCUSING

1. Close your right eye and sight an object with your left eye. Focus the binocular by rotating the center focus wheel until the image is sharp and clear.
2. Open your right eye and close your left eye. Rotate the right eyepiece until the object sighted is sharp and clear. (Note the setting of the diopter scale for later use.)
3. Both sides (eyes) are now in focus and you will need to use only the center focus wheel to focus on the other objects.

C. RUBBER FOLD-DOWN EYE CUPS

Fold down for use with eyeglasses and fold up for use without eyeglasses. They provide comfort and promote viewing ease.

II. HOW TO CARE FOR YOUR BINOCULAR:

- A. Keep the lens covers (that come with your binocular, except compact type) on the lenses when binocular is not in use.
- B. When wiping the lenses, use the lens cloth that comes with the binocular, or a soft, lintless cloth.
- C. To remove any remaining dirt or smudges, add one or two drops of isopropyl alcohol to the cloth.
- D. Store your binocular in a moisture-free area.

III. VERY IMPORTANT

Never attempt to clean your binocular internally or try to take it apart.

CAUTION!

Viewing the sun can cause permanent eye damage.
Do not view the sun with this binocular or even with the naked eye.

CASSINI™ Limited One Year Warranty

We guarantee to replace or, at our option, repair any products or parts thereof which are found defective in material or workmanship during the first year from date of purchase. Our obligation with respect to such products or parts shall be limited to replacement or repair. In no event shall we be liable for consequential or special damages or for transportation, installation, adjustment, or other expenses which may arise in connection with such product or parts. The customer shall be responsible for all costs of transportation and insurance, both to and from CASSINI/COSMO BRANDS INC., and shall be required to prepay such costs. No expenses, warranties and implied warranties, whether or not merchantability of fitness for any particular use or otherwise (except as to title) other than these expressly set forth above which are made in writing and signed by executive officer of our corporation.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES, IN NO EVENT SHALL THE MANUFACTURER OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER, BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF THE POSSIBILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

CASSINI™

DIVISION OF COSMO BRANDS INC.
21230 SW 246th ST. HOMESTEAD FL 33031 USA
www.cosmosoptics.com

IF YOU NEED ANY FURTHER HELP WITH YOUR CASSINI ITEM
PLEASE E-MAIL US AT CUSTOMERSERVICE@COSMOOPTICS.COM

COSMO BRANDS INC.

COSMO BRANDS INC.
21230 SW 246th ST. REDLAND FL 33031 USA
www.cosmosoptics.com