



 
CASSINI™
CSK-3
GOLF METER

CSK-3 GOLF METER

Thank for your purchase of Intelligent Golf Score Meter **CSK-3**. This new golf meter can be used to take scores for 4 players' team competition or individual exercise and record times of stroking and putting of 8 courses. It has 6 memories as well as clock, calendar and alarm. The personalized design such as big LCD display, portable carry etc., is easy for reading scores as well as making stroking. Besides, the fashionable appearance could show your unique taste. In a word, the golf meter would greatly interest your golf exercise.



-1-

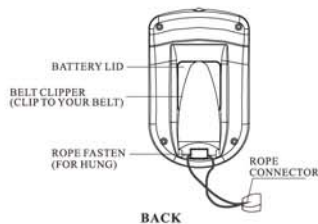

How to wear the golf meter?

If you like, you can attach the golf meter to your belt, or just hung it.




How to turn on/off the power?

-2-

- Turn on: Hold MODE/ON key for 2 seconds to turn on the score display.
- Turn off: Hold mode/on key for 2 seconds to turn off the display and keep the original record. OR if there is no operation after 15 minutes, it will shut off automatically but will keep the original record.


CONTROL MODE:
This Golf score Meter has four modes: as following picture

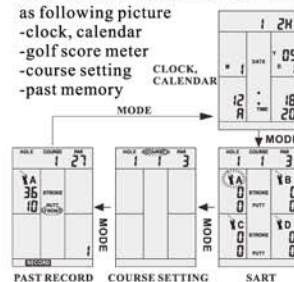

-3-

CLOCK, CALENDAR AND ALARM SETTING

1, clock, calendar display

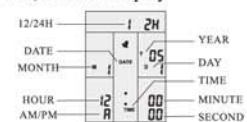

2, operation of clock, calendar and alarm setting

- Press STROKE key in CLOCK mode, then reset the flashing part accordingly. The sequence is: 12/24H-year-month-day-hour-minute-second-alarm hour-alarm minute-alarm on/off.
- Press "PUTT" key to increase the value while "-" key to decrease the value.
- IF the alarm is off, you can find no "A". If the alarm is on, it will display "A". You can press PUTT key to select alarm ON or OFF in the mode of CLOCK ALARM.


-4-

COURSE SETTING

- Golf Score Meter can keep records of 8 different courses including 18 holes' scores of each course. Each hole's score is preset as 3.

● The way of setting course: Press "MODE" key to enter into the course setting, meanwhile "COURSE" is flashing.

- 1 Press PLY/COURSE key to select scene (1-8). The selected scene often be the current course.
- 2 Press "HOLE" key to select the hold number.(1-18)
- 3 Press "STROKE" or "PUTT" key to change the scores of each hole's standard stroking. (3-5)

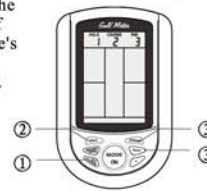

-5-

● How to change the current course?

- 1 Press "PLY/COURSE" key to select course.
- 2 Press "MODE" to select back to score.



NOTE: Every time after quitting from scene, the last setting will be acquiesced as the current scoring course while new scores will be apply automatically to current score.

GOLF SCORE METER

- The sequence of scoring is: set current course → reset current course to zero (when the score is not zero) → operate the golf score meter.
- Reset current scores, then hold "-" key for 3 seconds can reset all scores to zero and come back to HOLE 1. You can see player A is flashing.

THE OPERATION OF GOLF SCORE METER

- 1 Press "HOLE" key to select hole (1-18)
- 2 Press "PLY/COURSE" key to select player A,B,C or D, the selected players' index will flash

-6-

- 3 How to increase the value of stroking and putt. (NOTE 1)
Press "STROKE" key to increase value of putt times. Press once, the value will add one. Press "PUTT" key to increase value of stroking times. Press once, the value will add one.



- 4 How to decrease the value of stroking and putt.(NOTE 1)
--First press "-"key, then press "STROKE" key to decrease the value of stroking. Press once by turns to decrease one value accordingly.(NOTE 2)
--Press "-" key then press "PUTT" key to decrease the value of putting. Press once by turns to decrease one value accordingly.

Note:1. Value of putting will change with value of stroking. If the putting adds once or decreases once, the value of putting will also add or decrease once accordingly.

-7-

Note:2. Value of putting wouldn't less than the value of stroking. When the value of putting and stroke is the same, the value of putt will decrease with stroking automatically.

- How to check the current player's total score?
Every player has three groups scores: the first 9 holes', the latter 9 holes' and the last score.
- 1 Press " PLY/COURSE " key to select the current player.
- 2 Press "RECORD/TOTAL" key to check the scores circularly. The following signs' flashing individually will donate which kind the scores belong to:
FRONT 9 holes' scores: scores of No.1~No.9 hole
BACK 9 holes' scores: scores of No.10~No.18 hole
FINAL scores: the final score of No.1~No.18 hole
FINAL is the final scores: No.1-18 hole
Note: The PAR score in the upper row means the value of holes.

-8-

- How to keep record
1 Press "PLY/COURSE" key to select player you want keep records for.
- 2 Hold "RECORD/TOTAL" key for 2 seconds, the corresponding player's score will be kept, at the same time the score is reset.
- 3 If the selected score is kept successfully, the signal "RECORD" under the display will flash for 1 second. If all players' scores are 0, the records won't be kept.
- 4 If the memory is full, the signal "FULL" will show. If want to keep records, you must switch to "RECORD" mode to delete some records and wait for the signal "FULL" disappear then switch back to score mode to keep record.

PAST RECORDS

- Golf meter can keep 6 groups memories (the sequence of the records is showing under the right corner of the display). Each group have three total scores: the first 9 holes' scores, the latter 9 holes' scores and the last score. The following

-9-

signals will flash to show which groups the scores belong to:
FRONT 9 holes' scores: scores of No.1~No.9 hole
BACK 9 holes' scores: scores of No.10~No.18 hole
FINAL scores: the final score of No.1~No.18 hole

- How to enter into the record mode
Press "MODE" key until "RECORD" flashing in the last row of display showing entering into the PAST RECORD mode.
You can see kept records and delete records in this mode.
- How to view past records.
1 Press "PLY/COURSE" key to select records(1-6), the last record is newly kept.
- 2 Press "RECORD/TOTAL" key to check three scores



-10-

- How to delete the past records
1 Press "PLY/COURSE" key to select record needed to be delete.
- 2 Press "-" key ,then press "STROKE" or "PUTT" key. Each time can delete one group memory. When delete successfully, the signal "RECORD" will shine to show you. If the signal FULL shows before deleting, the signal will disappear automatically after deleting successfully.
- 3 After deleting one group memory successfully, the next group memory will exchange the former one automatically. Now the record won't change, but the player and scores are the latter ones.

BATTERY REPLACEMENT

When the LCD display becomes dim, it is necessary to replace the battery. Use one "+" screwdriver to release the screw in the battery lid. Take out the battery lid and old



-11-

CR 2032 battery. Put in new CR 2032 battery after 10 seconds. Then replace the battery lid in right position and turn the screws tight

NOTE:

1. The product should be used in the temperature between 0° ~ 50° C and be kept in the temperature between -10° C ~ +60° C. The humidity should be less than 95%;
2. Do not expose the golf meter directly under sun or strong light;
3. Keep it away from corrosive material.
4. Do not use in the rain.

-12-