



CASSINI™

GRAVITATOR INSTRUCTIONS

1. REMOVE CONTENTS OF CARTON:
 - AC ADAPTER
 - BASE
 - CONSTELLATION SPHERE
 - MAGNET
2. SIT COMFORTABLY ON A STABLE, (NON ROCKING CHAIR) AT YOUR DINING ROOM TABLE, OR /DESK OF SIMILAR HEIGHT AND ATTACH AC ADAPTER TO BASE AND PLUG IN OUTLET.
3. INSERT MAGNET INTO SPHERE SO THE SMALL WHITE "DOTS" ON BOTH THE INSIDE OF THE SPHERE AND ON THE MAGNET TOUCH. ATTACH THE TOP TO THE BOTTOM OF THE SPHERE AND CLOSE.
4. HOLD THE SPHERE VERY GENTLY IN BOTH HANDS WITH THUMBS AND INDEX FINGERS AT A HEIGHT OF APPROXIMATELY 6" ABOVE THE BASE.
5. LOWER THE SPHERE UNTIL YOU WILL FEEL THE MAGNETIC BALANCE POINT AND SLOWLY RELEASE. IF IT FLOATS ON THE FIRST TRY, CONGRATULATIONS. IF NOT, SIMPLY START OVER.



YOUR GRAVITATOR WILL FLOAT A WIDE VARIETY OF OBJECTS SUCH AS MEMORABILIA THAT WEIGH **NO MORE THAN 3 OUNCES**. TO DO THIS, SIMPLY REMOVE THE MAGNET FROM INSIDE THE SPHERE AND USE AS A PLATFORM, SEE BELOW EXAMPLE, (BASEBALL SHOWN, NOT INCLUDED):





WHEN PLACING OBJECTS ON THE PLATFORM, YOU MAY NEED TO ADJUST THEIR POSITION UNTIL THE WEIGHT IS CENTERED OVER THE MIDDLE OF THE MAGNET/PLATFORM SO PLEASE BE PATIENT. IF AN OBJECT IS NOT BALANCED, PLEASE DOUBLE CHECK THE WEIGHT AND RE-ADJUST THE POSITION ON THE PLATFORM. YOU WILL FIND IT MORE DIFFICULT TO FLOAT OBJECTS OF IRON OR MAGNETIC MATERIAL DUE TO THE MAGNETIC FIELD BETWEEN THE ITEM AND THE BASE.



[HTTP://WWW.CASSINITELESCOPES.COM/CVIDEO/CASSINI_VIDEOS.HTML](http://www.cassinitelescopes.com/cvideo/CASSINI_VIDEOS.HTML)

IMPORTANT!

THE ELECTROMAGNETIC FIELD SENSOR INSIDE YOUR LEVITATION DEVICE IS DESIGNED TO AUTOMATICALLY TURN OFF POWER TO THE UNIT UNDER CERTAIN CONDITIONS SUCH AS OVERHEATING IN ORDER TO PREVENT DAMAGE TO THE CIRCUITRY AND ENSURE LONG PRODUCT LIFE. IF AFTER A FEW TRIES, YOU HAVE NOT SUCCESSFULLY LEVITATED THE SPHERE, UNPLUG ADAPTER AND WAIT A FEW MINUTES BEFORE YOUR NEXT ATTEMPT.

CAUTION:

- *PEOPLE WITH PACEMAKERS SHOULD NOT COME IN CONTACT WITH THIS DEVICE
- *MAKE SURE UNIT IS ON A FLAT SURFACE
- *KEEP AWAY FROM ANY STEEL OBJECTS OR OTHER ELECTRONIC ITEMS
- *THIS IS NOT A TOY AND IT NOT SUITABLE FOR CHILDREN UNDER 12 YEARS OLD
- *FOR INDOOR USE ONLY.

CASSINI™ Limited One Year Warranty

We guarantee to replace or, at our option, repair any products or parts thereof which are found defective in material or workmanship during the first year from date of purchase. Our obligation with respect to such products or parts shall be limited to replacement or repair. In no event shall we be liable for consequential or special damages or for transportation, installation, adjustment, or other expenses which may arise in connection with such product or parts. The customer shall be responsible for all costs of transportation and insurance, both to and from CASSINI/COSMO BRANDS INC., and shall be required to prepay such costs. No expenses, warranties and implied warranties, whether or not merchantability of fitness for any particular use or otherwise (except as to title) other than these expressly set forth above which are made in writing and signed by executive officer of our corporation.

NO LIABILITY FOR CONSEQUENTIAL DAMAGES, IN NO EVENT SHALL THE MANUFACTURER OR ITS SUPPLIERS BE LIABLE FOR ANY DAMAGES WHATSOEVER. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF THE POSSIBILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

CASSINI™
DIVISION OF COSMO BRANDS INC.
21230 SW 246th ST. HOMESTEAD FL 33031 USA
www.cosmosoptics.com

IF YOU NEED ANY FURTHER HELP WITH YOUR CASSINI ITEM
PLEASE E-MAIL US AT CUSTOMERSERVICE@COSMOSOPTICS.COM